

# Stalker Pro 3s Wireless Speed Sign Interface Module

## Equipment Setup

1. Align the connector on the Interface Module to the connector on the LED Speed Sign, then attach.


2. Plug the power supply into the LED Speed Sign. It will power up automatically and run through a short diagnostic sequence.

You are now ready to pair the sign to your Pro 3s radar gun.



## Pairing the gun and Wireless Module

1. Press the ON/OFF key to power up the gun. The display will read BALL.

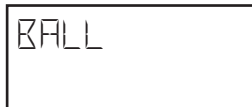

2. Briefly press the MENU key. The display will read RANGE.



3. Press the MENU key 5 times until the wireless configuration screen WI EN displays. (If the WI EN is set to APP or OFF use the RECALL or SELECT key to set to 5.9n.



(continued on back)

### \*Note

LED Speed Signs are designed to display Peak speed, Rolldown speed, or Hit speed, but not Spin Rate.

# Stalker Pro 3s Wireless Speed Sign Interface Module

4. Press MENU key.



5. On the back side of the Wireless Speed Sign Interface Module, locate 'Wireless Module S/N SY00XXXX.'

6. Enter the last 4 digits of the Wireless Module S/N into the gun:

- Use the TRANSMIT and PEAK keys to move left and right between digits.
- Use the RECALL and SELECT keys to enter numbers.



Example

7. Pull the gun's trigger to save the settings.



applied concepts, inc.

855 East Collins Boulevard ■ Richardson, Texas 75081  
972.398.3780 ■ Fax 972.398.3781

**888-STALKER**

**Stalker.Sport**